

BG PARTY SHELTER



Voordat u begint

Lees vooraf alle instructies aandachtig.

Selecteer een vlakke (geen gladde!) ondergrond, vrij van stenen, takken en andere harde of scherpe voorwerpen om de BC Party Shelter op te zetten.

Zet de BC Party Shelter met minimaal 2 personen op. (voorkeur voor 4 personen)

Zorg bij het opzetten dat de poten niet weg kunnen glijden!

Bij onjuist gebruik, opzetten of onderhouden van de BC Party Shelter vervalt de garantie!

Onderdelen:

Kruisverbinding met gemonteerde stokken (1)

Dakstokken 2-delig (2)

Driepuntsverbinding met gemonteerde stokken (4)


Tentvoet (4)

Tentdoek (1)

Haringen (16)

Scheerlijnsset

Nylon lint (1)

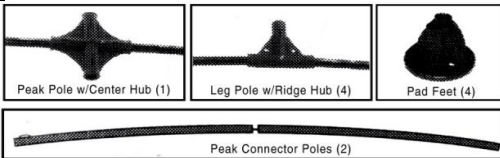


Afstand bepalen


Belangrijk: Alle vier de tentvoetjes moeten 3,70 meter uit elkaar staan. Om de afstand tussen de tentvoeten te bepalen, gebruikt u het nylon lint. De totale lengte van deze lijn is 14,8 meter. Dit lint plaatst u om ieder tentvoetje. Vervolgens zet u alle 4 de tentvoeten uit elkaar, tot het lint is gespannen en de afstand tussen de tentvoeten gelijkmatig zijn verdeeld.

Het opzetten van de BC Party Shelter:



1. Zet de kruisverbinding met stokken in elkaar. (Fig.2)

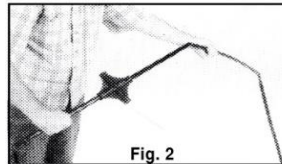

2. Zet de dakstokken in elkaar. (Fig.3)




3. Plaats het uiteinde van de dakstok (gemarkeerd met de pijlen) in de kruisverbinding. (Fig.4, 5 en 6)

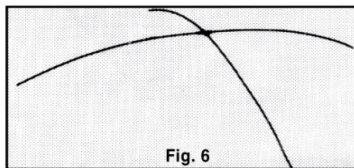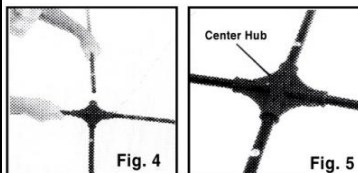

4. Zet de driepuntsverbinding met stokken deels in elkaar. (Fig.7)



LET OP! Zet het onderste deel van de stok niet in elkaar!

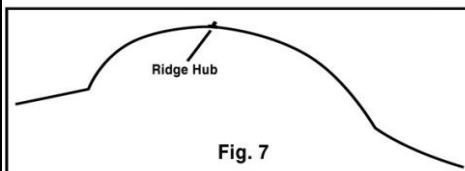


5. Plaats het einde van de stokken in de driepuntsverbinding. (Fig.8 & 9)

Herhaal voor de andere 3 driepuntsverbindingen.


Let op! Zorg ervoor dat de metalen pinnetjes in het gleufje vallen van de driepuntsverbinding, wellicht moet je de stok iets draaien.

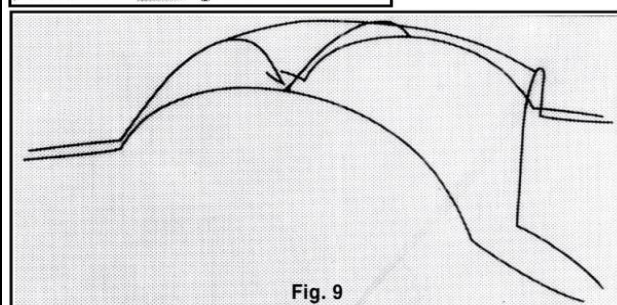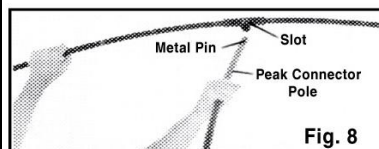

6. Vouw het tentdoek open en trek het over het frame. Vouw één hoek van het tentdoek terug over de Party Shelter, zodat u toegang onder de Party Shelter behoudt. (Fig.10)

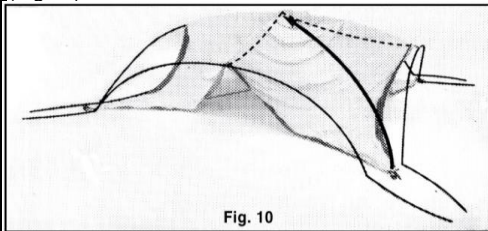

7. Maak het klittenband aan de binnenzijde van het tentdoek vast aan de stokken. (Fig.11)

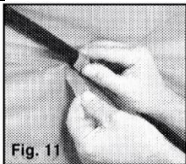


8. Plaats de tentvoet op de vier hoeken (Bepaald met behulp van de nylon lijn) (Fig.12)
Let op! Plaats de tentvoet met de "inkeping" naar buiten gericht.




9. Zet het onderste deel van de stokken in elkaar en plaats deze in het voetje. Draai tot het metalen pinnetje in het gleufje valt. Herhaal voor de andere drie tentvoetjes.




10. Kijk na of alle verbindingen VOLLEDIG in elkaar zitten om stokbreuk of verbuigingen te voorkomen. Plaats een haring in de gaten van de tentvoetjes VOORDAT u doorgaat naar stap 11. (Fig.14)

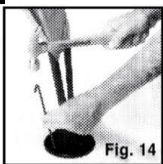


11. Bevestig de haak aan het uiteinde van het tentdoek aan het voetje. Herhaal dit voor de overige drie voetjes. Trek aan met het riempje aan de onderzijde. (Fig.15 & 16)

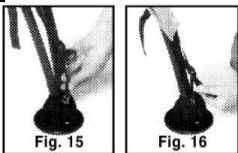


12. Wikkel de riempjes om de onderzijde van de vier stokken en klik de gesp vast. Trek met het riempje het doek onder spanning. (Fig.17 & 18)

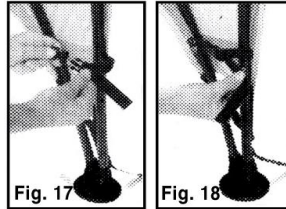

13. Maak alle klittenband lusjes aan de binnenkant van het tentdoek vast aan de stokken. (Fig.19)

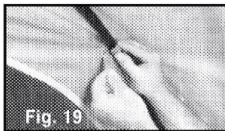

14. Maak de scheerlijnen vast aan de afspanpunten op de buitenzijde van het tentdoek en zet deze vast met haringen. (Fig.20)

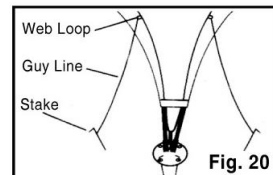

Bevestigen van de zijwanden (optioneel)

De zijwanden kunnen in elke opening van de Party Shelter geplaatst worden.

Vouw de zijwand open en plaats deze met klittenband aan de stokken.

Belangrijk om te weten:

Berg de Party Shelter nooit op, voordat deze goed is gedroogd en het vuil verwijderd is (Ook niet voor een korte tijd). Bewaar de stokken apart van het doek.

De scheerlijnen zijn noodzakelijk, gebruik ze altijd!
Bij losse ondergronden v-vormige haringen gebruiken.

De haringen dienen verwijderd te worden, door aan de haringen te trekken. Trek nooit aan het tentdoek om de haringen te verwijderen.

De tentstokken dienen nooit geassembleerd opgeborgen te worden.

Waarschuwing: Houdt vlammen en warmtebronnen op afstand van het tentdoek. Deze Party Shelter voldoet aan de "Flammability requirements of CPAI-84". Het materiaal zal vlam vatten als het langdurig in contact komt met een warmtebron of vlam. Het behandelen van het tentdoek met een substantie kan het vlamvertragend effect negatief beïnvloeden.

Bo-Garden
Hercules 20
5126RK Gilze

BG PARTY SHELTER MEDIUM



Before you begin

Read all instructions before set up.

Select a level site clear of rocks, branches and other hard or sharp objects to install your BG Party Shelter.

It is important for the stability and life of your BG Party Shelter to have a secure mounting surface.


Ask the help of at least one other person to assist you when it is time to assemble the BG Party Shelter. (preferable with 4 persons)

When mounting the BG Party Shelter take care that the Pad feet do not slip away!

In case of improper use, mounting or maintain the warranty of the BG Party Shelter expires!

Parts and Components

- Peak pole with center Hub (1)
- Peak connector poles (2)
- Legpole with ridge hub (4)
- Pad feet (4)
- Canopy (1)
- Pegs (16)
- Set of guy ropes
- Webbing band (1)

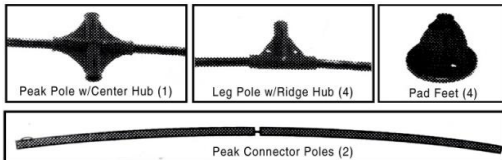


Distance Pad feet


Important: All 4 pad feet must be located 3,7mtr apart. For accurate placement, use the webbing band. The total length of this band is 14,8 mtr. The band must be placed around each pad feet. Then you place each pad feet out of each other till the webbing band is tight and the distance between the pad feet is equal.

To set up the BG Party Shelter

1. Assemble the peak pole with center hub. (Fig.2)



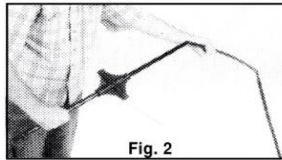


2. Assemble both peak connector poles. (Fig.3)




3. Insert ends of the peak connector poles marked with the arrows into the peak pole with center hub. (Fig.4, 5 en 6)

NOTE: make sure metal pin locks into slot on top of ridge hub, you may have to twist peak connector from side to side.

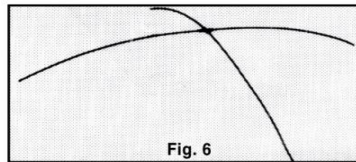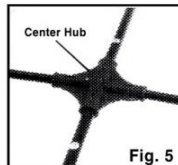
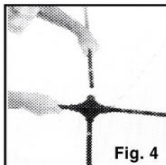


4. Partially assemble the four leg poles with ridge hub (Fig.7)
NOTE: Do not assemble the last pole parts into the leg pole.

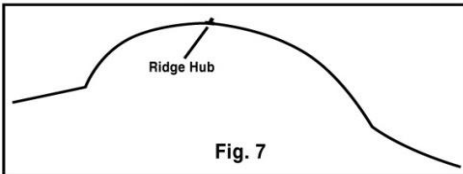

5. Insert end of peak connector pole into ridge hub. (Fig.8 & 9)
Repeat for the remaining three leg poles with ridge hub.

NOTE: make sure metal pin locks into slot on top of ridge hub, you may have to twist peak connector from side to side.

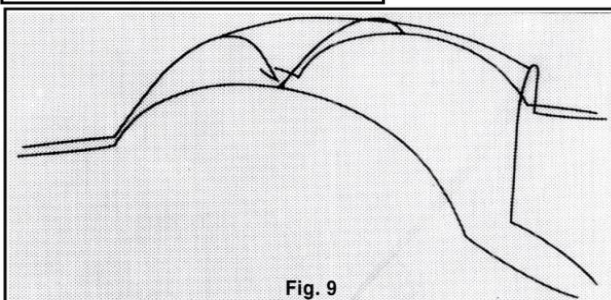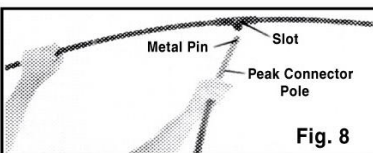

6. Unfold canopy and pull over the frame. Fold back one flap on canopy to allow access to inside of shelter frame and under side of canopy. (Fig.10)

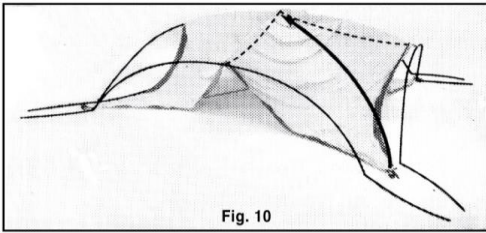


Fig. 10

7. Locate the hook & loop fasteners closest to the center of the under side of the canopy and wrap around poles to secure. (Fig.11)

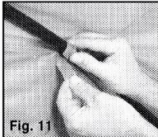


Fig. 11

8. Position pad feet at the four corners (determined with the use of the webbing band). (Fig.12)

Note: pad feet must angle toward center of shelter with vertical slots facing outward.

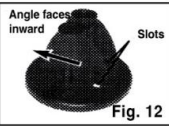


Fig. 12

9. Insert ends of poles into pad feet and twist until metal pin locks into slots. Repeat for other three pad feet locations (Fig.13)

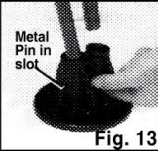


Fig. 13

10. Check if all pole connections are full assembled in each other! Otherwise the poles will bent/break!

Drive pegs through holes in pad feet to secure before proceeding to step 11. (Fig.14)

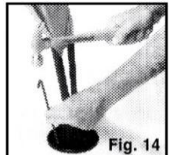


Fig. 14

11. Attach hook end of canopy tension strap to square slot on the pad feet. Repeat for the remaining three pad feet. Pull down strap at each corner to tighten.(Fig.15&16)

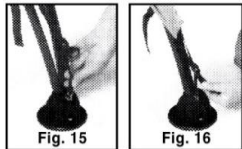


Fig. 15

Fig. 16

12. Wrap web straps around pole at all four corners and hook snap-in buckles. Pull strap to tighten. (Fig.17 & 18)

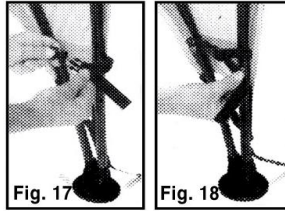


Fig. 17

Fig. 18

13. Locate all hook & loop fasteners on the seams on the inside of the canopy. Wrap around poles and secure tightly. (Fig.19)

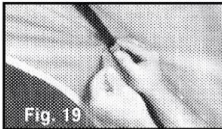


Fig. 19

14. Attach guy lines to web loops located on outside seams of canopy then secure with pegs.(Fig.20)

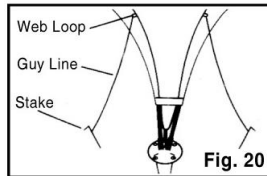


Fig. 20

Attaching Side wall (Optional)

The side wall may be placed in any of the arched openings of the BG Party Shelter

Unfold side wall and fix center hook with velcro to the poles

Things you should know:

- Never store your shelter, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your shelter. Use a separate storage bag.
- Stakes should be removed by pulling on the stake itself. Never pull on the canopy to remove stake.
- Shelter poles should not be left telescoped together during storage

WARNING: Keep all flame and heat sources away from this shelter fabric.

This shelter meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the shelter fabric may render the flame-resistant properties ineffective.

Bo-Garden
Hercules 20
5126RK Gilze